

# **XCam2™ Remote Controlled Indoor/Outdoor Color Video Camera** (with built-in 2.4 GHz transmitter)

- **Wide Angle lens.**
- **Built-in 2.4 GHz Video Sender.**
- **Can be turned on and off remotely (remote controlled power supply included).**
- **Use it outdoors to monitor your front door, back yard, etc.**
- **Use it indoors to monitor a child's bedroom, etc.**

**Model XX17A**

The XX17A includes the XC19A camera and XM13A remote controlled power supply. The XC19A is a very small and compact color video camera with wide angle lens and built-in 2.4 GHz Video Sender. You can attach it to a wall anywhere you want to monitor. The XC19A transmits video and sound to the VR31A 2.4 GHz receiver (sold separately) which is connected to your TV located anywhere in your home (up to 100 ft. away). The XM13A power supply lets you turn the camera on and off remotely, from X10 remote controls (sold separately).

1. Refer to the setup and operating instructions that came with the 2.4 GHz Video Receiver, Model VR31A (sold separately) to set up the Receiver.
2. Mount the camera in a suitable location with the antenna on top so the camera is the right way up. If you install it outdoors, run the small cable adapter through a hole in the wall so you can plug the power supply into an AC outlet indoors.
3. Plug the power supply's jack into the adapter cable on the camera.
4. Set the Housecode and Unit Code. (See instructions included with X10 remote controls).
5. Plug the power supply into any 120V AC outlet.
6. Set the channel switch on the camera to the same setting as the one on the VR31A Video Receiver.
7. Adjust the antenna on the camera if necessary to aim it in the direction of the VR31A Receiver that you have connected to your TV or monitor.

## **LIMITED 1-YEAR WARRANTY**

X10 Wireless Technology, Inc. (X10WTI) warrants X10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X10WTI agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10WTI within the warranty period and with proof of purchase.

If service is required under this warranty:

1. Call 1-800-675-3044 or e-mail sales@x10.com for details on how to return your unit(s).
2. Enclose a check for \$4.00 for postage and handling.
3. Enclose a dated proof of purchase.
4. X10 is not responsible for shipping damage. Units to be returned should be packed carefully.
5. For additional warranty information, contact X10.

**F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNIT'S. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

**X10.com, a Div. of X10 Wireless Technology, Inc.**  
**1-800-675-3044 sales@x10.com**

**www.x10.com®**

XX17A-02/01

